Quick Guide

S²

ESQUIRE
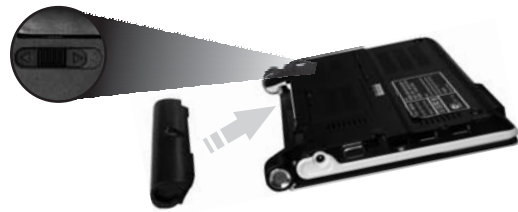
LapTop Computer

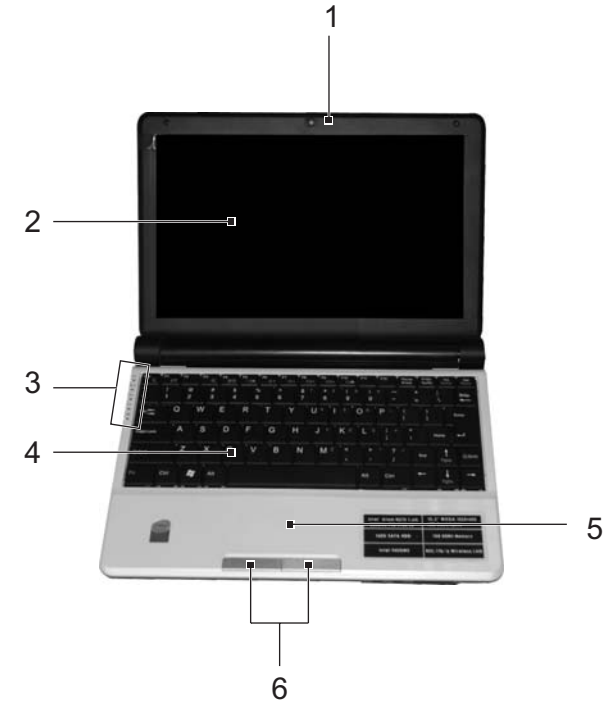# *Quick Guide*

For the first Start up

1

Ensure the battery is properly locked in place as shown.

2

Push

Connect the supplied DC Jack to the product.
Push the Power button to turn on the laptop

Illustrations are reference only. Actual product specifications may vary.

Top View

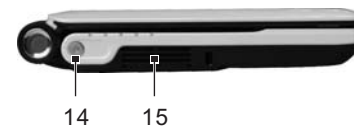| #	Item	Description
1	Built in Webcam	Web camera for video communication
2	Display screen	LCD (Liquid -Crystal Display) for displaying computer video output
3	Status light indicators	LEDs (Light-Emitting Diode) that light up to indicate the status of the computer's functions.
4	Keyboard	Data input device for the computer.
5	Touchpad	Sensitive touch pad that can move around the cursor by user's finger.
6	Click buttons(left and right)	The Left and Right click button for selection and execution.

Quick Guide

Front View

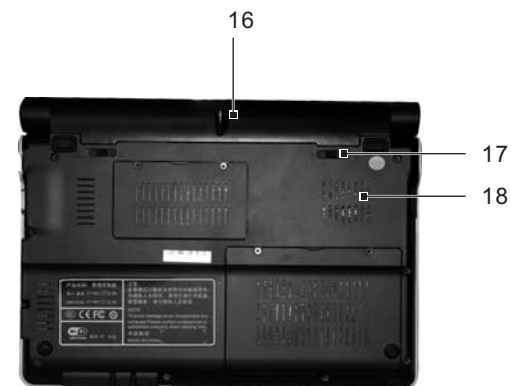| #	Item	Description
7	Microphone-in jack	External microphones input terminal.
8	Headphone/speaker/ Line-out jack	Audio output terminal for connecting to headphone or multimedia speaker.
9	SD Card reader	SD (Secure Digital) card slot
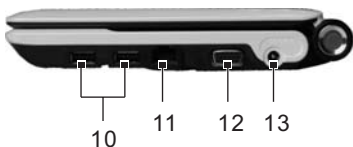
Left View

#	Item	Description
10	USB 2.0 port	USB input ports for USB devices (eg. USB Mouse and USB thumb drive.)
11	Ethernet(RJ-45)port	Connects to an Etherent 10/100-based network
12	External display (VGA)port	Video output for connecting to external display devices (eg. Projector)
13	DC-in jack	Input terminal of the supplied AC adaptor.

Right View

#	Item	Description
14	Power button	Turns the computer on and off
15	Ventilation slots and cooling fan	Opening slot for cooling fan's air flow to carry out all the internal heat. Caution: Do not cover this ventilation slots to avoid this product from overheated

Bottom View

#	Item	Description
16	Battery	Battery of Computer
17	Battery lock	Lock the battery pack in position.
18	Ventilation slots and cooling fan	Opening slot for cooling fan's air flow to carry out all the internal heat. Caution: Do not cover this ventilation slots to avoid this product from overheated

Quick Guide

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightess, volume output & etc...... To activate hotkeys, press and hold the <Fn> key before pressing the other key in the hotkey combination.

HotKey

Hotkey	Icon	Function	Description
<Fn> + <Esc>		Sleep	Put the computer in sleep mode
<Fn> + <F1>		WiFi	Turns Wireless on and off
<Fn> + <F3>		Speaker toggle	Turns speaker on and off
<Fn> + <F4>		Touchpad toggle	Turns the internal touchpad on and off
<Fn> + <F5>		Display toggle	Switches display output between the display screen, external monitor (if connected) and both.
<Fn> + <F6>		Bright down	Decreases the screen brightness
<Fn> + <F7>		Bright up	Increases the screen brightness
<Fn> + <F8>		Volume down	Decreases the sound volume
<Fn> + <F9>		Volume up	Increases the sound volume
<Fn> + <F10>		Screen blank	Turns the display screen backlight off to save power. Press any key to return.
<Fn> + <Ins>		NumLk	When Num Lock is on, the embedded keypad is in numeric mode.
<Fn> + <Del>		ScrLk	When Scroll Lock is on, the screen moves one line up or down when you press arrow keys respectively. Scroll Lock does not work with some applications.
<Fn> + <↑>		PgUp	Page up.
<Fn> + <↓>		PgDn	Page down.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. the serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number and purchase information.

Esquire's E2 Series Notebook PC

Model number： _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

S² is the logo registered trademark of Esquire Tech Limited（Hong Kong）.

http://www.esquire.com.hk/

Quick Guide